

HOW TO ELEVATE AERIAL AND TUNE TELEVISION

1. Loosen the aerial post by turning the white locking mechanism



2. Raise the post and lock off by tightening the locking mechanism.



3. Wind in an anti clockwise direction. This changes the position of the dish on the roof from horizontal to vertical.

4. The red dot indication the facing position of the aerial dish.



TUNING THE TELEVISION

1. Turn on the television (remote is located in the cupboard above)
2. Press OK on the Installation Guide
3. Television will Auto-tune – channel tuning will take some time
4. Once the television is tuned, you may need to adjust the aerial to gain better reception – refer instructions above