

## WATER SUPPLY TO CARAVAN

Trekkin Caravans have the ability to supply water from an internal water tank and external main pressure taps.

### 1. Mains pressure or tap operation.

Locate the hose from the front storage compartment; note this is not a usual garden hose but a food grade drinking water hose. Connect to your nearest tap available and connect to the caravan via the hose connector located at the front driver's side. Turn on the tap and your good to go for continuous supply of fresh water.



### 2. 90 ltr Storage tank operations.

The storage tank is located under the front passenger side lounge. For the caravan to draw from or indeed fill this tank the stop valve must be open. This is located next to the storage tank towards the front of the caravan and storage tank. The open position is indicated by the handle pointing down the line as detailed in the photo below. When the valve is in the open position the caravan will draw it's what from the tank.



### **3. Refilling of the water tank:**

Ensure the tank valve is open as detailed in point 2. Connect hose to the caravan as detailed in point 1. Once the hose is connected turn on and the tank will start filling. If the valve is closed it will not fill the tank, only charge the water lines. Once the tank is full it will overflow onto the ground outside the van via the over flow pipe. Turn off the hose and the tank will be full.

### **4. Trouble shooting Water Pump or water operations:**

**Q:** There is no water coming out of the tap?

**A:** Have you turned on the water pump? The on button is located on the main power board above the entry doorway. Please ensure the water pump button has a green light lit next to it. Then check if you hear the pump operating when the tap is used. If you do not hear the pump running when you turn on the tap, then the pump is not switched on, check the control panel.

If you are still not getting water out of the tap, then you will need to check the valve location next to the water tank.

Set in the position that follows the blue hose, this is drawing from the tank (Point 2)

Set in the position horizontal to the blue hose, this is drawing from the external water source – mains pressure.

**Q:** The pump is continually running.

**A:** Please ensure the tap for the hose is turned on and water is available to the caravan. If using the water tank for your water source, ensure valve in correct position. If there is no water available in the tank, turn off water pump immediately via the main switch located above the entry doorway.

**Q:** What is the humming noise when I fill the tank?

**A:** This is the restrictor reducing the water pressure entering the caravan. This is normal operation.